


EXTERNAL ENCLOSURE FOR NETWORK IP CAMERA

- INSTALLATION GUIDE -


1. Remove the top cover by sliding it to the side



2. Remove 8 Screws (4 on both sides holding face plate and back plate)

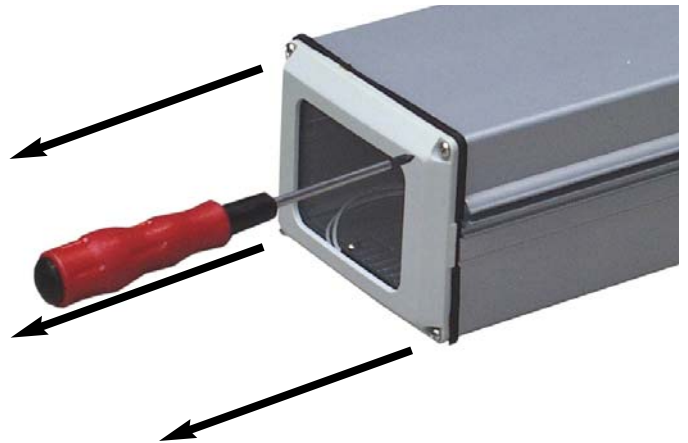

3. Remove back face plate (caution: fan is still wired to circuit board)
Then remove the upper half of the case by sliding it to the right.

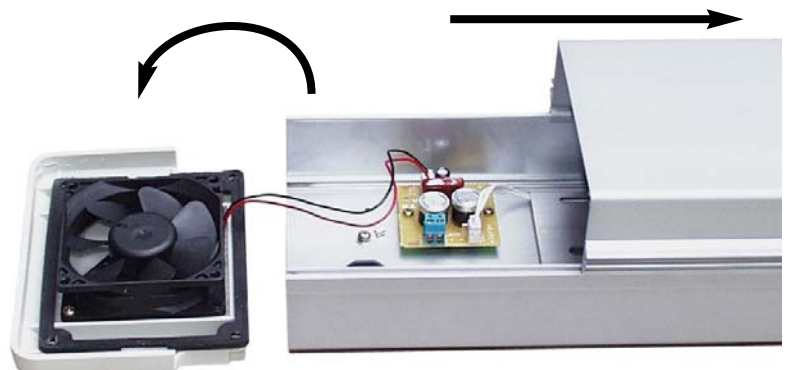

4. Loosen the screws and remove the mounting plate as shown below.



5. Fasten the IP Camera to the mounting plate, then re-attach the mounting to the enclosure.



6. How to connect the power to the circuit board

Attention: High Voltage! Only experienced electricians should perform this operation.

